Montageanleitung Assembly instructions



■ GER
■ ENG



Massivsauna

WELLFUN LARGE 206 x 206 x 204 cm

Log board sauna WELLFUN LARGE



Log board sauna WELLFUN LARGE

☐ Dimension of the cabin: 204 x 204 x 202 cm

■ incl. border edging: 206 x 206 x 204 cm

■ Inside dimension: 196 x 196 x 198 cm

■ Wall thickness: 40 mm



Dear customer,

Before starting to assemble the cabin, please check with the help of the parts list, if all elements have actually been supplied. If, in the unlikely event, any elements are missing inform your dealer up to 14 days after receipt of the cabin.

Please keep the delivery note, the bill and the assembly instructions carefully in case of later queries.

You need the following tools:

hammer and a wood block or a rubber mallet
 cordless screwdriver with bits for phillips or torx

tape measure

1 drill Ø10mm; 1 drill Ø3mm

1 spirit level

1 pencil

We recommend an assistant for the assembling of the cabin. Furthermore we recommend to drill the holes before.

The electrical connection may only be performed by a qualified electrician or similary qualified person.

Minor variations in dimensions are possible. Subject to technical modifications and misprints.


Parts list WELLFUN LARGE

2 floor frame massive battens 66 x 4 x 9 cm ■ 3 floor frames massive battens 204 x 4 x 9 cm ■ 4 corner battens 90° 193 x 6 x 6 cm ■ 4 side walls A/B 193 x 48 x 4 cm (1 with ventilation gap) ■ 8 side walls 193 x 48 x 4 cm 2 side walls 193 x 60 x 4 cm (1 for electricity) ■ 4 roof supporting battens massive battens 197 x 4 x 4 cm ■ 4 roof covering battens 4 x 1,2 cm (2 pcs. 192 cm; 2 pcs. 200 cm) 2 roof elements 194 x 49 x 4 cm 2 roof elements 194 x 48 x 4 cm ■ 3 border edging battens massive battens 4 x 2 cm (2 pcs. 210 cm - 1 x 45° inclined; 1 pc. 208 cm - 2 x 45° inclined) ■ 6 bench supporting battens massive battens 4 x 4 cm; (3 pcs. 58 cm; 2 pcs. 120 cm; 1 pc. 48.5 cm) 2 assembly battens for bench coverings 26 x 4 x 4 cm 2 benches 195 x 60 x 10 cm ■ 1 bench 135 x 60 x 10 cm ■ 2 back rests 190 x 28 x 2 cm ■ 1 bench covering 195 x 34 x 2 cm ■ 2 head rests 40 x 36 x 12 cm ■ 1 door frame sill-free 202 x 72 x 4 cm incl glass door 191,5 x 59 x 0,8 cm ■ 1 set of hinge plates ■ 1 inside liaht ■ 1 lamp facing 52 x 24,5 x 3 cm ■ 1 floor grating 70 x 50 cm ■ 1 heater protective grille 2 - part 57 x 47,7 x 75 cm ■ 1 ventilation gate 52,5 x 14 x 1,2 cm

■ 1 wooden batten 200 x 2,6 x 1,2 cm

■ 1 silikoncabel 300 cm - 5 x 1.5 mm²

1 assembly material set1 assembly instructions

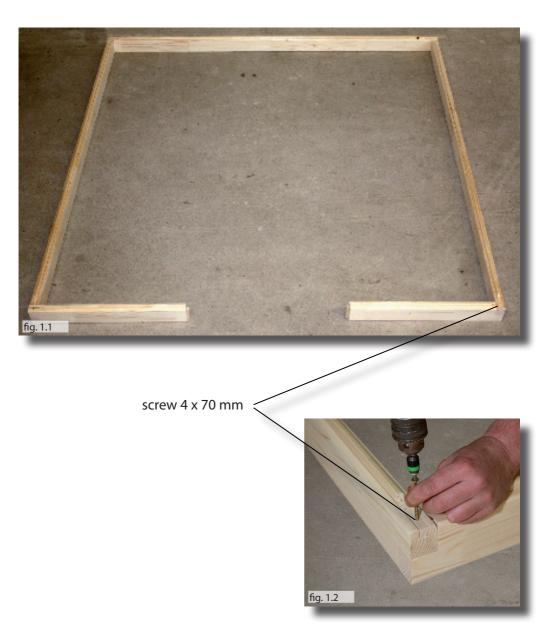



ENG





ENG



Remove the transport batten from the door frame






Drill with 3 mm electric drill


6 pcs. screws 5 x 100 mm




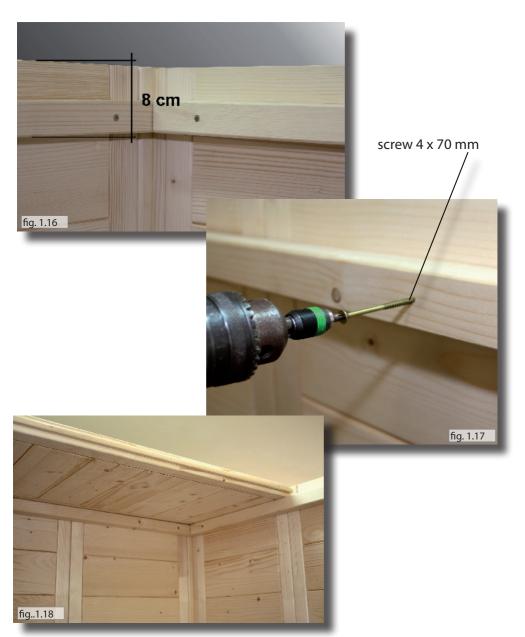

ENG


Bench supporting battens

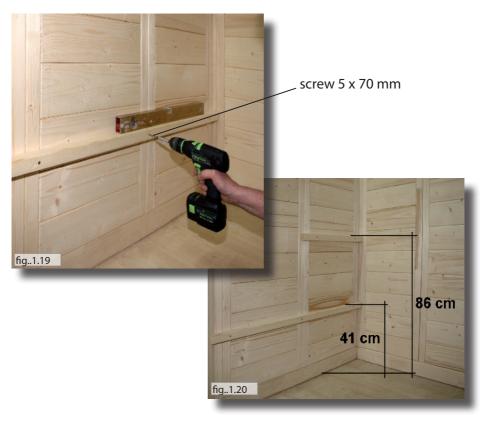

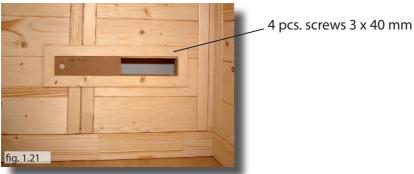






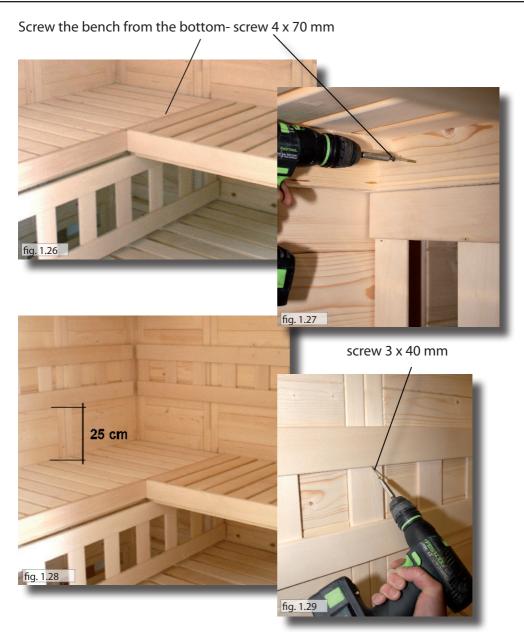



ENG



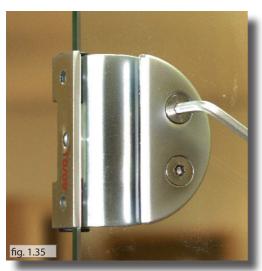






Door seal from the glass door






Put the sheet metal on the glass door

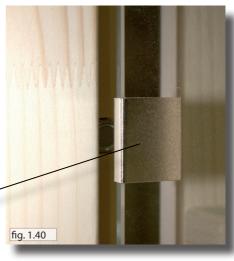

ENG

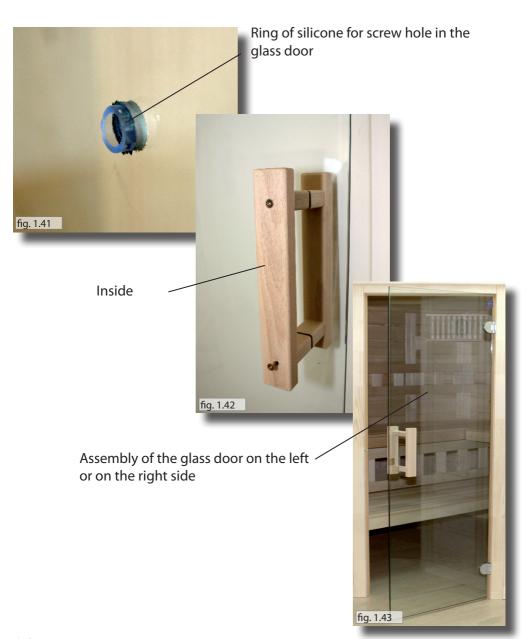



ENG

Start with the frontal border edge above the door





screw 3 x 40 mm




Covering for the screw hole





PLAN WELLFUN LARGE 206 x 206 x 204 cm

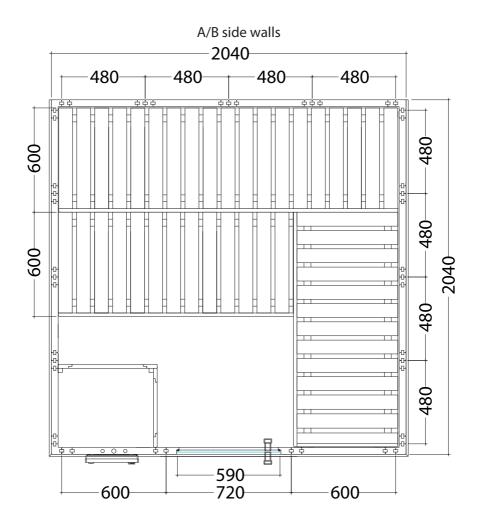

Assembly of the cabin left or right



Massivsauna WELLFUN LARGE Log board sauna WELLFUN LARGE